

NAVO W1

Golf GPS Watch User Guide

A quick printable guide for setup, charging, starting a round, distances, hazards, green view, score tracking, course updates, and troubleshooting.





Contents & Quick Start

Use this page to find the most common task quickly.

01	Buttons and navigation	3
02	Charging and battery care	4
03	First-time setup	5
04	Start a round	6
05	Main screen and GPS distances	7
06	Hazards and green view	8
07	Shot distance and slope	9
08	Score tracking	10
09	App and course updates	11
10	Care and troubleshooting	12

FASTEST WAY TO BEGIN

Charge the watch, choose language and distance units, go outdoors, open Play Golf, wait for GPS lock, select your course, and begin from hole 1.



Buttons & Controls

NAVO is built for quick use during play.

- 1 Wake the screen**
Double tap, press the crown button, press the lower button, or raise your wrist to looking position.
- 2 Use touch for selections**
Tap menu items and on-screen controls. Use swipes to move between watch views.
- 3 Open actions with the crown button**
The top-right crown-style button opens actions or menus depending on the current screen. It presses only; it does not rotate.
- 4 Go back with the lower button**
The lower button turns off the screen or returns to the previous screen without losing your place.



Main screen when not playing golf.

TIP

Use short button presses during normal operation. Only hold a button when a specific action requires it.

Battery & Charging

Charge before travel or before a long golf day.

Charging steps

1. **Use the included magnetic USB charging cord.**
2. **Align the charger flat against the back of the watch.**
The magnets help it seat correctly.
3. **Plug the USB end into a reliable power source.**
4. **Let the watch charge before the round.** A full charge is best before you leave for the course.

Battery life: More than two full rounds of golf on a single charge, with up to 12 days of standby.

Storage: Top up the watch every few weeks if it will not be used for a while.

Contacts: Keep the charging contacts clean and dry.




Align the magnetic charger so it sits flush.

BATTERY CARE


Avoid charging in extreme heat or cold. If the watch is wet, dry the watch and charger before charging.

First-Time Setup


Set the basics before using NAVO on the course.

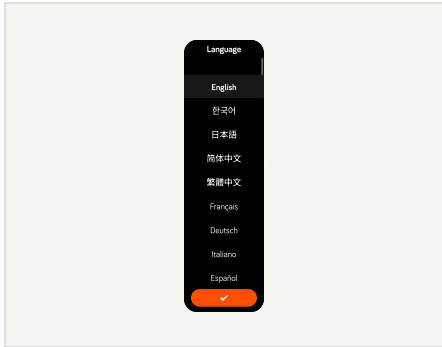

Language

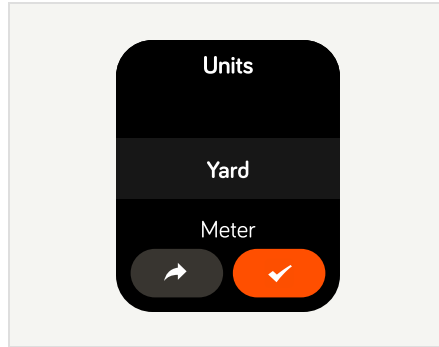

Distance units

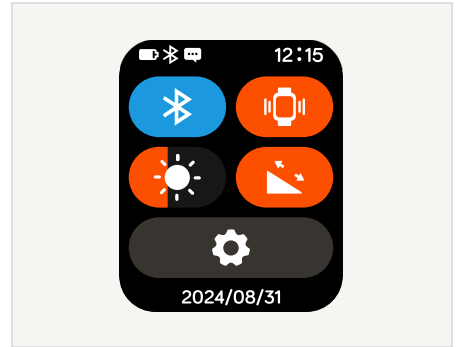

Quick settings

CHOOSE YOUR LANGUAGE

When the watch is turned on for the first time, select your language. You can change this later in settings.

CHOOSE UNITS

Select meters or yards for distance. You can change this later if you travel or prefer another unit.

TIME AND DATE

NAVO sets the correct time automatically when you start playing golf and GPS is available.

QUICK SETTINGS


Swipe left to right from the main watch screen to adjust Bluetooth, vibration, brightness, slope, and parameters.

BEFORE YOUR FIRST ROUND

Start GPS search outdoors in an open area. GPS course search works best outside, away from buildings.

Start a Round

Open Play Golf, lock GPS, choose your course, and begin.

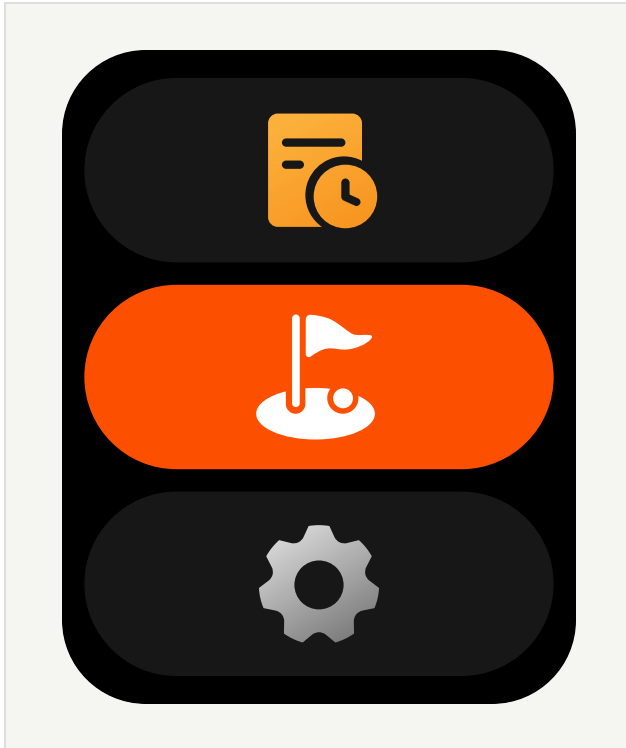

The center flag button opens Play Golf.

- 1 Open Play Golf**
Press the crown button, or swipe right to left from the main watch screen and tap the center flag button.
- 2 Wait for GPS**
NAVO searches for GPS satellites and then shows nearby golf courses.
- 3 Select your course**
If a course name is shortened, tap the three dots on that line to view the full course name.
- 4 Begin from hole 1**
Hole 1 distances appear after you choose the course. NAVO advances automatically when you arrive at later tee boxes.

IF NO COURSE APPEARS

Move outdoors to an open area and wait for GPS to settle. Buildings, vehicles, and heavy tree cover can slow the first lock.



Main Screen & GPS Distances


Use front, middle, and back yardages for fast club decisions.

Main distance screen

- **Back distance:** shown at the top of the main distance stack.
- **Middle distance:** highlighted for quick club selection.
- **Front distance:** shown at the bottom of the distance stack.
- **Hole and par:** visible on the right-hand panel.
- **Nearest hazard:** tap the middle-right area to view hazards for the hole.
- **Score entry:** tap the lower-right score area to enter the current hole score.

ACCURACY TIP


Pause at the ball for a moment so GPS can settle before reading the distance.

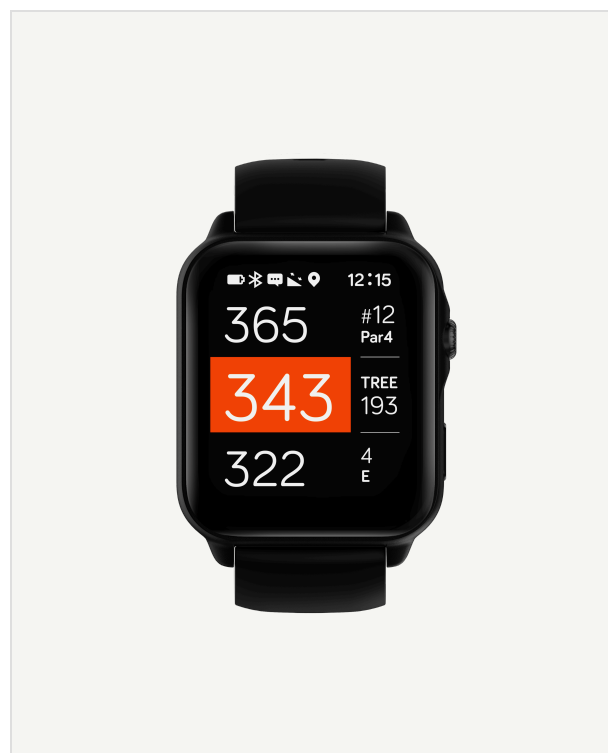


Tap targets on the main playing screen.

Hazards & Green View

Check trouble and refine your approach distance.

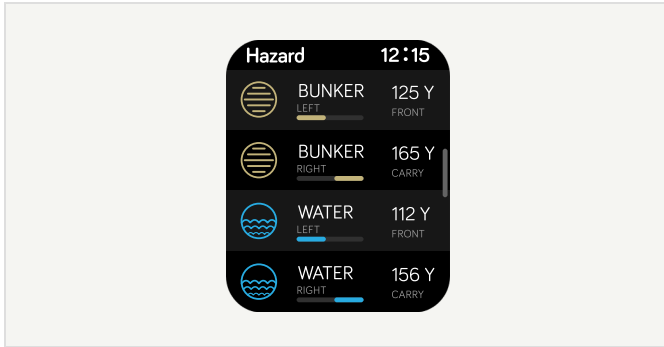

Hazards show front and carry distances.

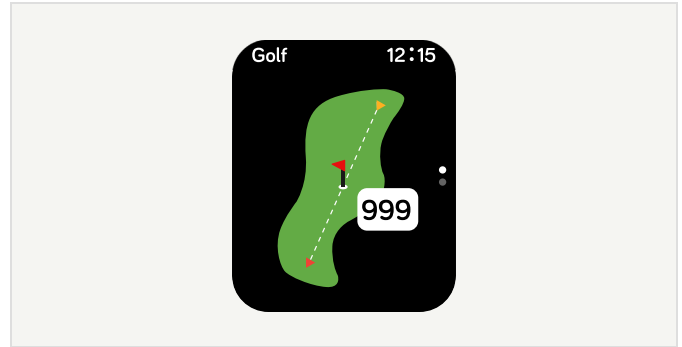

Green view lets you move the pin position.

OPEN HAZARDS

From the main FMB distance screen, press the right-middle area to open hazards. You can also swipe left to right to see the closest hazards.

READ HAZARD DISTANCES

NAVO shows position, such as left or right, plus front and carry distances so you know where trouble starts and what distance clears it.

COMMON HAZARDS


Hazards may include water, bunkers, trees, doglegs, and the end of the fairway.

OPEN GREEN VIEW


Swipe right to left from the distance UI to open Green View. Move the pin to update the distance instantly.

Shot Distance & Slope

Measure real shot distance and use elevation-adjusted yardage.

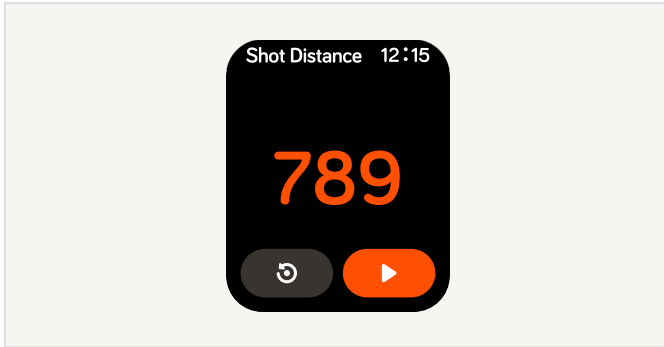

Start measuring before you hit.

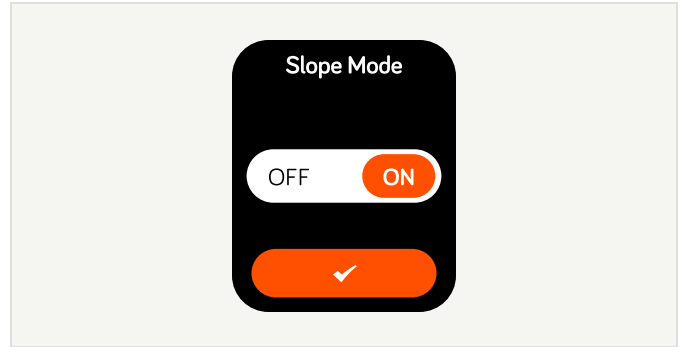

Turn on slope from Golf settings.

- 1 Open Shot Distance**
 During a round, press the crown button to open the menu, select Shot distance, then press the play button to start measuring. You can also swipe left to right twice from the distance UI.
- 2 Measure the shot**
 Start at your ball, hit the shot, then walk or ride to the landing area. NAVO measures the distance between the two points.
- 3 Use slope when needed**
 Open Settings > Golf > Slope and turn it on. NAVO shows adjusted distance alongside the standard yardage.

TOURNAMENT NOTE

Check the rules of the event before using slope or any elevation-adjusted distance during competition.

Score Tracking

Record strokes, putts, fairways, and greens as you play.



NAVO prompts for your score when you arrive at the next tee box.

- **Automatic prompt:** after each hole, NAVO asks for strokes, putts, FIR, and GIR when you reach the next tee box.
- **Manual entry:** tap the lower-right score area on the main screen to add score for the current hole.
- **Smart fill:** based on your score, FIR and GIR can be pre-filled automatically to save time.
- **Scorecard:** use the in-round menu to view your score card during the round.
- **Next hole:** once you confirm a hole, NAVO automatically shows distances for the next hole.

DISABLE PROMPTS

During play, press the crown button to open the menu, select Scoring, then select "Disable score prompts".



App & Course Updates

Your phone is optional during play, but useful for updates.

PHONE-FREE PLAY

NAVO works independently on the course. Courses are preloaded, so your phone is not needed while you play.

NAVO APP

The optional app supports course updates, firmware updates, score tracking, and performance stats over time.

Download the app

Visit navo.world/app to open the App Store or Google Play download page.

Request a course update

Visit navo.world/request-course-update if a course is missing, a layout changed, distances look wrong, or you have a scorecard or map to share.

Course update timing

Most updates are completed within 5 working days when the course address, layout or map, and scorecard are available.

Subscription

NAVO does not require a subscription. Course updates are free for life.

BEFORE CONTACTING SUPPORT

Include the course name, address, country, what changed, and any scorecard or layout file you have.

Care & Troubleshooting

Simple checks solve most setup and on-course issues.

Watch will not charge

Check that the magnetic charger sits flat, the contacts are dry, and the USB power source is working.

GPS is slow

Go outdoors to an open area and wait for GPS to settle. Avoid starting course search indoors.

Course is missing

Submit a course update request with the course address, map or layout, and scorecard if available.

Distances look wrong

Pause at the ball, confirm the correct hole, and request a course update if the course layout has changed.

Screen is hard to read

Open quick settings and adjust brightness. Keep the watch face clean and dry.

Score prompts are unwanted

Open the in-round menu, select Scoring, then disable score prompts.

WATER AND CLEANING CARE

After wet or dusty rounds, wipe the watch and charging contacts with a clean dry cloth before charging.

Support documentation:

navo.world/support

Contact support:

navo.world/contact

Replacement parts:

navo.world/support/replacement-parts